
Profi Tap

Zapfer für 5-Liter-Partyfässer

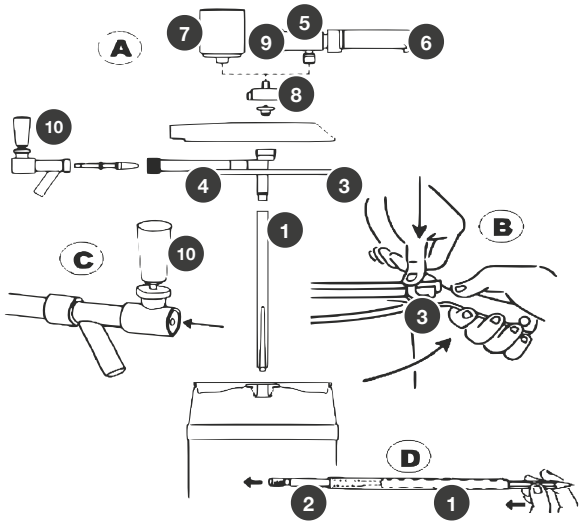

TEILE

1. Stechrohr
2. Kompensator
3. Kralle
4. Kralle
5. CO_2-Automatic
6. Kapselhalter
7. Handpumpe
8. Flügelmutter mit Konus
9. Rändelscheibe
10. Zapfhebel

Zapfer aufsetzen

1. Stechrohr 1 mit Kompensator 2 an die Zapfarmatur schrauben.
2. Das 5-Liter-Partyfass anstechen: Stechrohr in den Stopfen drücken, bis das Innenteil in das Fass rutscht. Beachten Sie die Hinweise auf dem Fass zu den unterschiedlichen Stopfen.
3. Erst die Kralle 4, dann die Kralle 3 mit dem beiliegenden Flaschenöffner am Fassrand aufklipsen (Bild B).

Druck aufbauen

Wahlweise mit der Handpumpe 7 oder mit der CO_2-Automatic 5:

- Handpumpe 7 auf den Konus der Flügelmutter 8 stecken und pumpen, bis genug Druck im Fass ist.
- CO_2-Automatic 5: siehe Abschnitt „CO_2-Automatic“. Mit der Rändelscheibe 9 im Uhrzeigersinn stellen Sie den Druck ein.


Zapfen

Zapfhebel 10 langsam ziehen – das Bier fließt.

Schäumt das Bier zu stark, ist zu viel Druck im Fass: Rändelscheibe 9 ein Stück zurückdrehen.

Klemmt der Zapfhebel nach einer längeren Pause, den Kolben eindrücken (Bild C).


CO_2-Automatic

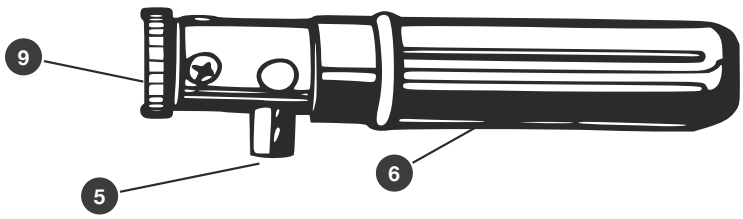

1. Rändelscheibe 9 gegen den Uhrzeigersinn bis zum Anschlag drehen (0 bar).
2. Kapselhalter 6 abschrauben, eine 16-g-CO_2-Kapsel einlegen und den Kapselhalter zügig und fest anschrauben. Ein kurzes Zischen zeigt, dass die Kapsel geöffnet ist.
3. CO_2-Automatic mit dem Aufsteckkonus auf die Flügelmutter 8 des Profi Tap stecken.
4. Rändelscheibe 9 im Uhrzeigersinn drehen, bis der gewünschte Druck eingestellt ist. Beim höchsten Druck von ca. 1,3 bar ist ein Klicken zu hören.

Ist das Fass leer, Rändelscheibe wieder gegen den Uhrzeigersinn auf 0 drehen. Das restliche CO_2 bleibt für das nächste Fass in der Kapsel.

Reinigung

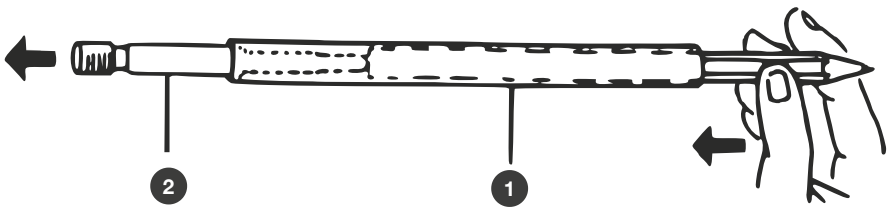

Kompensator 2 mit einem Stift aus dem Stechrohr 1 schieben.


- Alle Teile wie in Bild A und D gezeigt zerlegen und mit klarem Wasser spülen.
- Der Kompensator 2 sorgt für die richtige Schaumbildung. Zum Reinigen mit einem Stift aus dem Stechrohr 1 schieben.
- Handpumpe und CO_2-Automatic nicht zerlegen und nicht unter Wasser reinigen.

Tipp

Das Fass vor dem Anstechen kühlen. Mit der Wecomatic-Kühlmanschette bleibt es auch bei warmem Wetter länger kalt.

Profi Tap

Tap for 5-litre party kegs

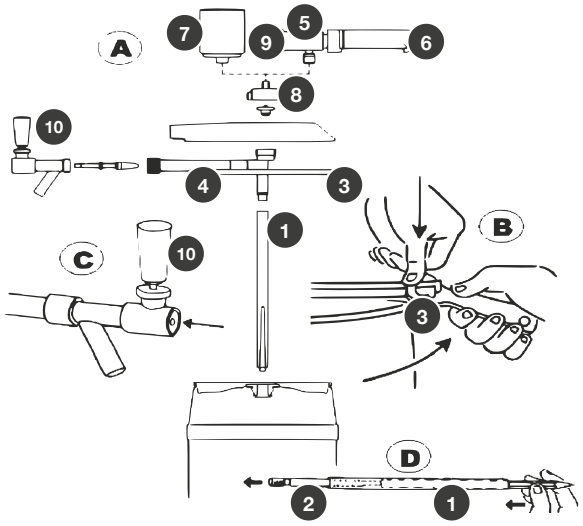

PARTS

1. Piercing tube
2. Compensator
3. Claw
4. Claw
5. CO_2 Automatic
6. Capsule holder
7. Hand pump
8. Wing nut with cone
9. Knurled disc
10. Tap lever

Fitting the tap

1. Screw the piercing tube 1 with the compensator 2 onto the tap.
2. Pierce the 5-litre party keg: press the piercing tube into the bung until the inner part drops into the keg. Follow the notes on the keg about the different bungs.
3. Clip first the claw 4, then the claw 3 onto the rim of the keg using the bottle opener supplied (picture B).

Building up pressure

Either with the hand pump 7 or with the CO_2 Automatic 5:

- Place the hand pump 7 on the cone of the wing nut 8 and pump until there is enough pressure in the keg.
- CO_2 Automatic 5: see section “CO_2 Automatic”. Set the pressure by turning the knurled disc 9 clockwise.


Tapping

Pull the tap lever 10 gently – the beer flows.

ⓘ If the beer foams too much, there is too much pressure in the keg: turn the knurled disc 9 back a little.

ⓘ If the tap lever sticks after a long break, push in the piston (picture C).


CO_2 Automatic

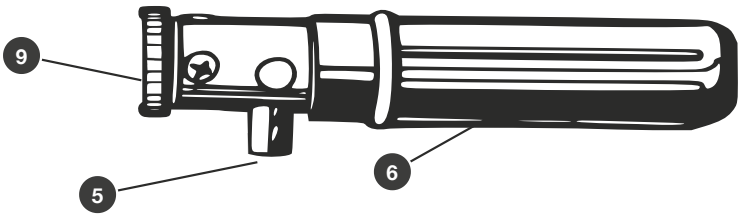

1. Turn the knurled disc 9 anticlockwise as far as it will go (0 bar).
2. Unscrew the capsule holder 6, insert a 16 g CO_2 capsule and screw the holder on quickly and firmly. A short hiss shows that the capsule is open.
3. Push the CO_2 Automatic with its cone onto the wing nut 8 of the Profi Tap.
4. Turn the knurled disc 9 clockwise until the required pressure is set. At the maximum pressure of approx. 1.3 bar you will hear a click.

When the keg is empty, turn the knurled disc back anticlockwise to 0. The remaining CO_2 stays in the capsule for the next keg.

Cleaning

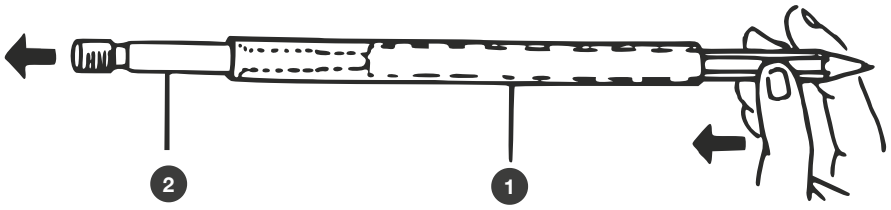

Push the compensator 2 out of the piercing tube 1 with a pen.

- Dismantle all parts as shown in pictures A and D and rinse them with clean water.
- The compensator 2 ensures the right amount of foam. To clean it, push it out of the piercing tube 1 with a pen.
- Do not dismantle the hand pump or the CO_2 Automatic and do not clean them under water.

Tip

Chill the keg before tapping. The Wecomatic cooling jacket keeps it cold for longer, even in warm weather.